

## # Backup alarms on E-Lit tools

### ## Backup alarms issue 1

\* Description: At start-up, after switch-off of the white LED, the LED flashes 3 times in red

\* Meaning: Backup configuration has been restored. The tool can be used without any restriction.

### ## Backup alarms issue 2

\* Description: At start-up, after switch-off of the white LED, the LED flashes 8 times in red

\* Meaning: Main configuration has been restored from the backup configuration

\* Instructions:

1. Check the speed of the tool
2. Contact our customer service

### ## Backup alarms issue 3

\* Description: Permanent flashing of the LED in red (6 flashes/second)

\* Meaning: The tool has switched to default settings. Speed and counters may be affected

\* Instructions: If the problem persists when the battery is plugged in, contact our customer service.

## ## Backup alarms issue 4

\* Description: Permanent flashing of the LED in red (3 flashes/second)

\* Meaning: All configurations have been corrupted. The tool is locked

\* Instructions: Contact our customer service.

## # Green LED behaviour

### ## Green LED flashing 2 times

\* Description: The tool is locked

\* Instructions: Check if Pset or Assembly Process has been selected on CONNECT: check the configuration.

### ## Green LED flashing 3 times

\* Description: Batch completed. The tool is locked

\* Instructions: Re-start the Assembly Process to unlock the tool.

### ## Green LED flashing 4 times

\* Description: The tool storage of results is full. The tool is locked.

\* Instructions: Re-synchronize the tool with CONNECT to unload results.

## # Blue LED behaviour

### ## Blue LED OFF

\* Description: The communication is lost or not established

\* Instructions: In case of not established communication, check the WI-FI settings of the tool and CONNECT.

### ## Blue LED flashing

\* Description: The synchronisation is in progress. CONNECT is currently receiving results from ELC tools.

### ## Blue LED steady

\* Description: The communication is established with CONNECT.

## # Red LED behaviour

### ## Red LED flashing 4 times

\* Description: Clutch sensor error

\* Instructions: If the fault still appears, contact our customer service.

### ## Red LED flashing 5 times

\* Description: Exceeding of the maximum temperature (70°C)

\* Instructions: Wait for the tool cool down. If the fault still appears, contact our customer service.

## Red LED flashing 6 times

\* Description: Tool overheating

\* Instructions: The power requested is too big. Do not use the tool as a drilling machine. If the fault still appears, contact our customer service.

## Red LED flashing 7 times

\* Description: Battery voltage fault

\* Instructions: Make sure that the tool is adapted for the battery used. If the fault still appears, contact our customer service.

## Red LED flashing 8 times

\* Description: Over-current on the power circuit

\* Instructions: This problem can result from a use requiring a too big power for the tool. If the fault still appears, contact our customer service.

\*

# Specific LED pattern

## 3 yellow + 3 red flashing lights

\* Description: Hardware channel

\* Instructions: An error has been detected either on trigger sensor or temperature sensor. If the fault still appears, contact our customer service.

## 2 x 10 orange flashing lights

\* Description: Preventive maintenance

\* Instructions: The tool has reached the Preventive maintenance level.